


NOTE:

ALL PLANTS MUST BE INSPECTED AND APPROVED BY THE SUPERINTENDENT PRIOR TO PLANTING. ALL PLANTS TO BE HEALTHY SPECIMENS, FREE OF PESTS AND DISEASES.

WATERING NOTE:

ALL PLANTS TO BE WELL WATERED PRIOR TO PLANTING SO ROOTBALL IS SATURATED.

POST PLANTING, WATER AGAIN SO ROOTBALL IS SATURATED. APPLY WATER AT A SLOW RATE TO ENSURE MULCH IS NOT DISPERSED.

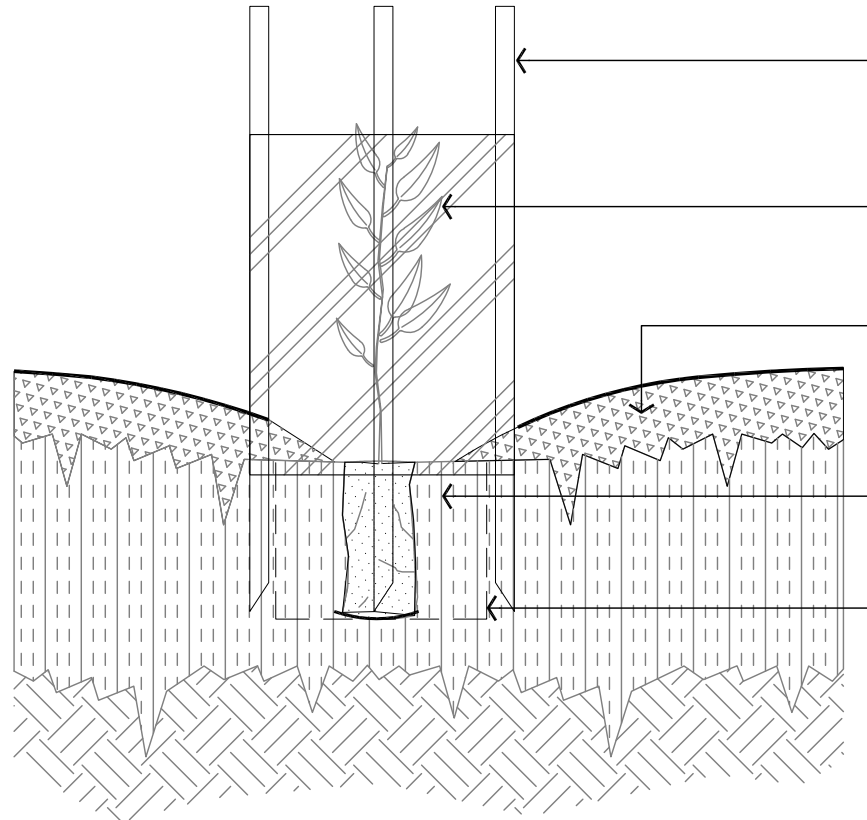

INSTALL PLANT SLEEVE AS APPROVED. FIX TO GROUND USING THREE POINTED 25 x 25 x 800mm (MIN HEIGHT) HARDWOOD STAKES WITH SLEEVES TAUT BETWEEN STAKES. ENSURE END OF STAKES EXTENDS INTO SUBGRADE BY MIN. 200mm DEPTH

INSTALL TUBESTOCK PLANT AS SPECIFIED. PRE-MIX SLOW RELEASE FERTILISER IF SPECIFIED BY SUPERINTENDENT

INSTALL 75-100mm DEPTH APPROVED MULCH. TAPER MULCH DOWN TO MEET PLANT, KEEPING CLEAR OF PLANT STEM

CULTIVATE SITE SOIL TO MIN. 200mm DEPTH OR AS SPECIFIED BY SUPERINTENDENT

EXCAVATE HOLE TWO TIMES AS WIDE AS THE ROOTBALL AND NO DEEPER THAN THE ROOTBALL BREAK UP SIDES OF HOLE PRIOR TO PLANTING

 **TUBESTOCK PLANTING**
SECTION

SCALE 1:10